
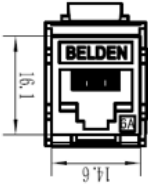



Installation Guide

WireNET UTP Keystone toolless CAT 6A Jack instruction


Partnumber	Color	Description	Front view
CU-JUAEW	White	WireNET® UTP Modular Jack, <u>KeyConnect</u> CAT6A	
CU-JUABK	Black	WireNET® UTP Modular Jack, <u>KeyConnect</u> CAT6A	

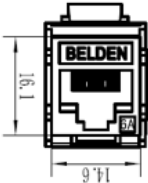


1
Open the product and remove the module cable pressure cover.

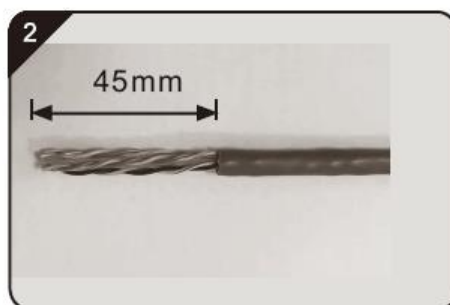

2
Stripped skin to 45MM .

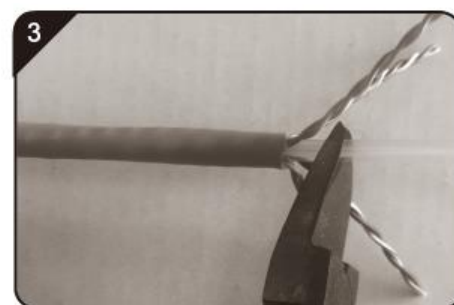


3
Cut the skeleton.

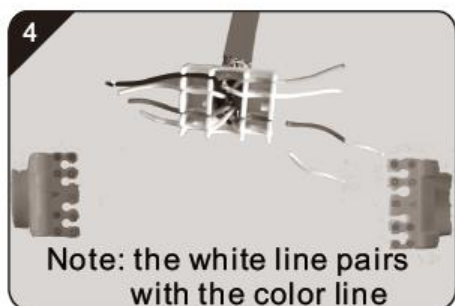


4
Note: the white line pairs with the color line


Refer to color and then put the cable into the pressure cap, and cut off the needless cable edge.

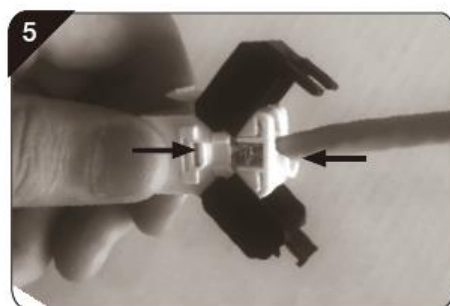


5
put the cable pressing cover into module line base (with a little strength) then use the both side cover to grip

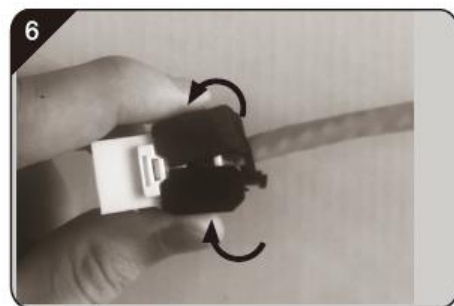

6
grip the right stress area in black.

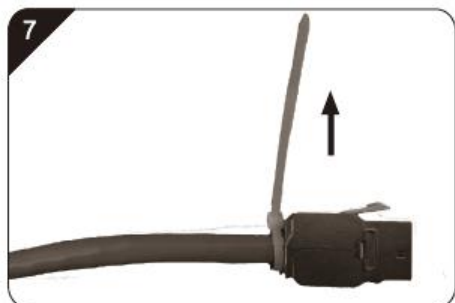

7
Push the cable tie in and lock it

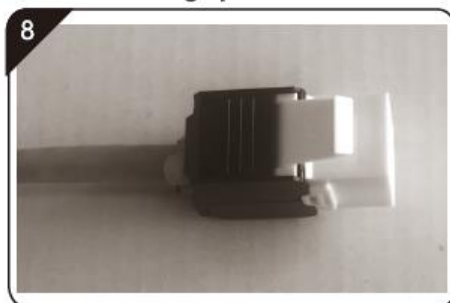

8
Complete.